



1-888-975-3343

Install Instructions

Manhole Access Frame Installation Instructions

Product Number	Product Description
MHAFIT40	Manhole Access Frame For Synthetic Turf Applications
MHAFNG40	Manhole Access Frame For Natural Grass Applications


Table of Contents

Manhole Access Frame Installation Instructions

ID-00648 - Manhole Access Frame Install Detail	3
--	---

Step 1: Overview and Pre-Assembly of MHAFIT40


See image below for component identification. Secure the Solid Lid in a safe location prior to MHAFIT40 installation. Assemble hardware as shown prior to concrete embedment.

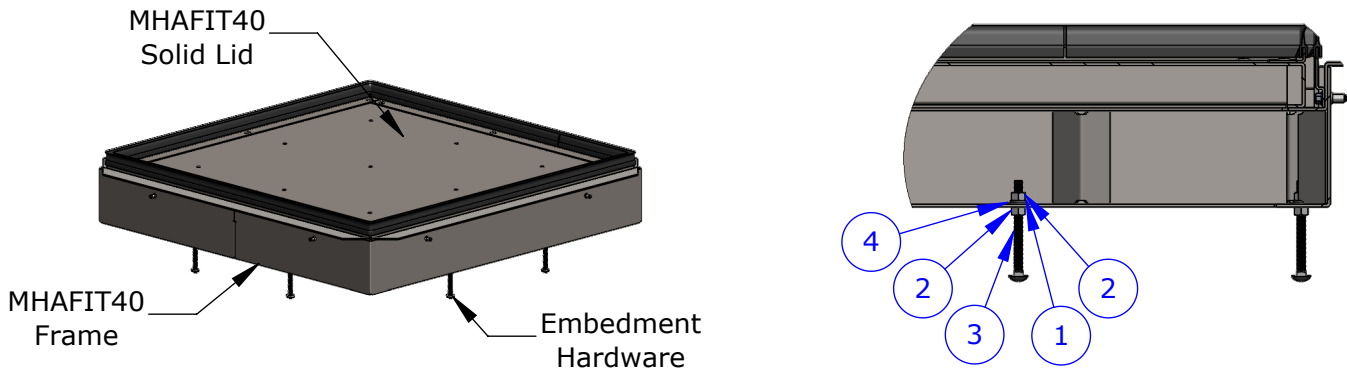

ITEM NO.	QTY	DRAWING NUMBER	ERP Part Number	DESCRIPTION
1	8	110-SLW3_8-SS	110-SLW-0006	Washer, Split Lock, 3/8\", SS
2	16	107-HXN3_8-16-SS	107-HXN-0020	Nut, Hex, 3/8-16, 316 SS
3	8	101-CAB3_8-16X4-SS	101-CAB-0004	Bolt, Carriage, 3/8-16 x 4.00\", 304 SS
4	8	110-FLW3_8-SS	110-FLW-0005	Washer, Flat, 3/8\", SS

Step 2: Cross Section Installation of Infill Retainment System for Synthetic Turf Applications

With the Manhole Ring Apron in its green state, embed the pre-assembled MHAFIT40 Frame into the concrete. Attach any optional nailer boards. Backfill stone/subbase flush with the Synthetic Infill Turf Attachment Ledge.

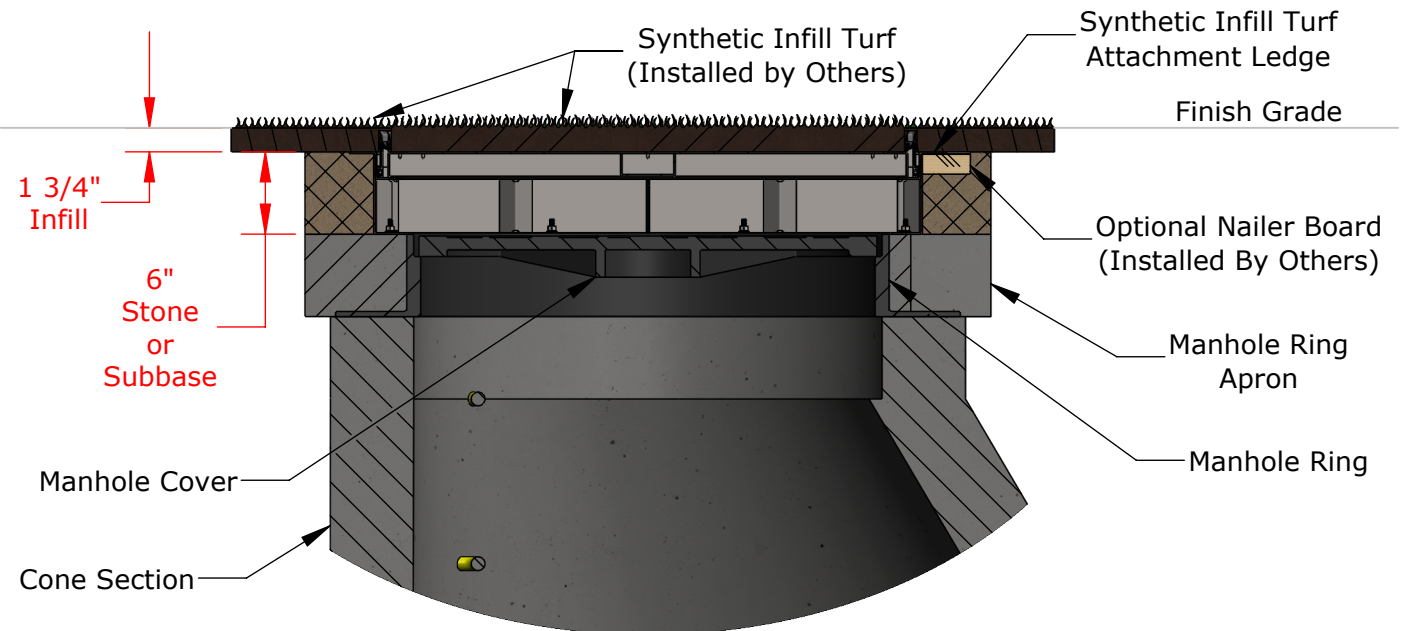

TITLE:
Manhole Access Frame Installation
Detail (Synthetic Infill Applications)


DWG NO:

ID-00648

SHEET 1 OF 2

Step 1: Overview and Pre-Assembly of MHAFNG40


See image below for component identification. Secure the Solid Lid in a safe location prior to MHAFNG40 installation. Assemble hardware as shown prior to concrete embedment.

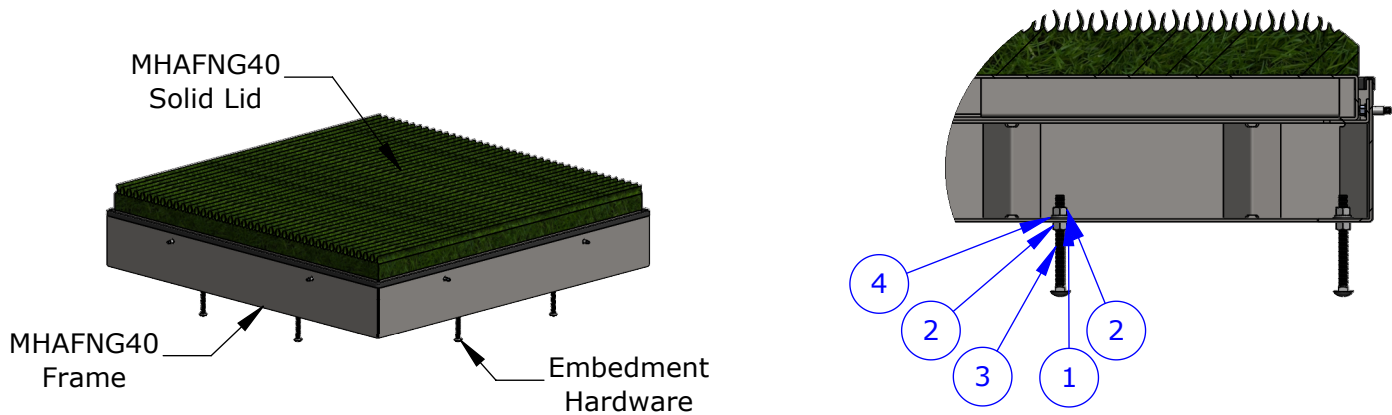

ITEM NO.	QTY	DRAWING NUMBER	ERP Part Number	DESCRIPTION
1	8	110-SLW3_8-SS	110-SLW-0006	Washer, Split Lock, 3/8", SS
2	16	107-HXN3_8-16-SS	107-HXN-0020	Nut, Hex, 3/8-16, 316 SS
3	8	101-CAB3_8-16X4-SS	101-CAB-0004	Bolt, Carriage, 3/8-16 x 4.00", 304 SS
4	8	110-FLW3_8-SS	110-FLW-0005	Washer, Flat, 3/8", SS

Step 2: Cross Section Installation for Natural Grass Applications

With the Manhole Ring Apron in its green state, embed the pre-assembled MHAFNG40 Frame into the concrete. Backfill subbase flush with the top edge of the MHAFNG40 frame.

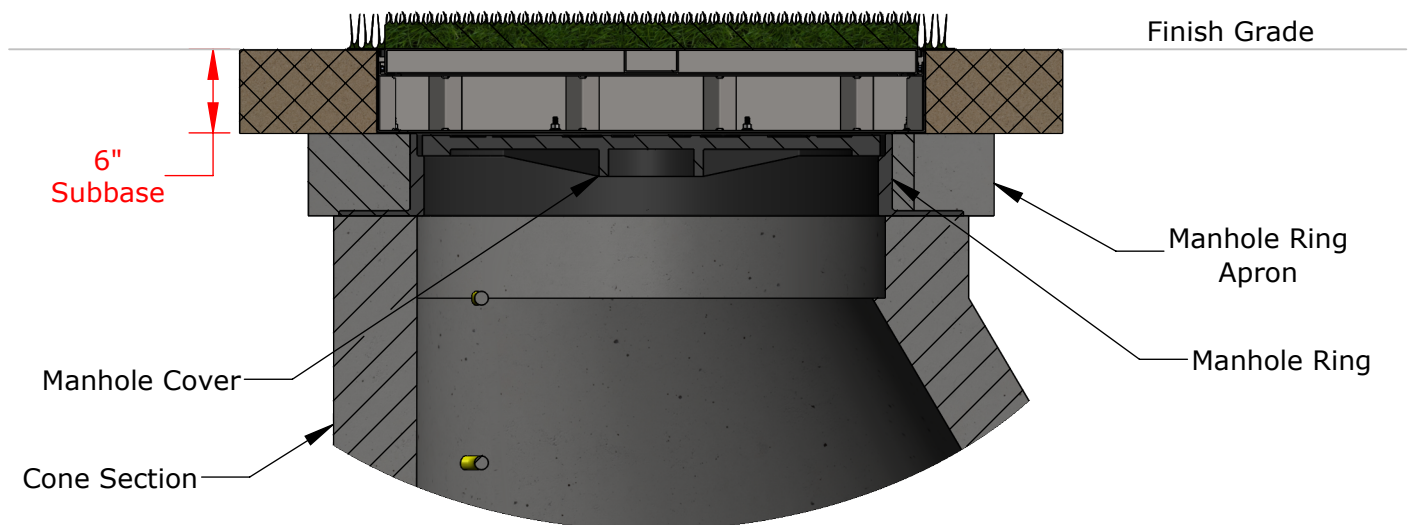

TITLE:
Manhole Access Frame Installation
Detail (Natural Grass Applications)

DWG NO:

ID-00648

SHEET 2 OF 2