



1-888-975-3343

Install Instructions

Ground Sleeve Football Goal Post


Product Number	Product Description
GP620COL	College Football Goal Post, 6' Offset, 20' Uprights
GP630COL	College Football Goal Post, 6' Offset, 30' Uprights
GP820COL	College Football Goal Post, 8' Offset, 20' Uprights
GP830COL	College Football Goal Post, 8' Offset, 30' Uprights
GP620HS	High School Football Goal Post, 6' Offset, 20' Uprights
GP630HS	High School Football Goal Post, 6' Offset, 30' Uprights
GP820HS	High School Football Goal Post, 8' Offset, 20' Uprights
GP830HS	High School Football Goal Post, 8' Offset, 30' Uprights
GP620ADJ	Adjustable Football Goal Post, 6' Offset, 20' Uprights
GP620ADJFX	Adjustable Football Goal Post, 6' Offset, 20' Fixed Uprights
GP630ADJ	Adjustable Football Goal Post, 6' Offset, 30' Uprights
GP630ADJFX	Adjustable Football Goal Post, 6' Offset, 30' Fixed Uprights
GP820ADJ	Adjustable Football Goal Post, 8' Offset, 20' Uprights
GP820ADJFX	Adjustable Football Goal Post, 8' Offset, 20' Fixed Uprights
GP830ADJ	Adjustable Football Goal Post, 8' Offset, 30' Uprights
GP830ADJFX	Adjustable Football Goal Post, 8' Offset, 30' Fixed Uprights
GP835COL	College Football Goal Post, 8' Offset, 35' Uprights
GP835HS	High School Football Goal Post, 8' Offset, 35' Uprights
GP635PRO	Professional Football Goal Post, 6' Offset, 35' Uprights

Table of Contents

Ground Sleeve Football Goal Post

ID-00001 - Football Goal Post Field Placement	3
ID-00002 - Football Goal Post Elevation Ground Sleeve	4
ID-00012 - Football Goal Post GPAFIT/GPAFNG Access Frame	5
ID-00009 - Ground Sleeve Style Goosneck Installation	6
ID-00011 - Football Goal Post Upright Installation	7
ID-00023 - Football Goal Post AdjustRight Upright Adjustment	9
ID-00010 - Football Goal Post Crossbar to Goosenack Installation	10

Goal Post Version	Access Frames
Ground Sleeve	Optional GPAFIT/GPAFNG
Plate Mount	Optional GPAFIT/GPAFNG
Rotating	Required GPAFITR30/GPAFN30
Gooseneck Hinged	Optional GPAFIT/GPAFNG
Rotating Gooseneck Hinged	Required GPAFITR30/GPAFN30
Manually Hinged	Required GPAFITR30/GPAFN30

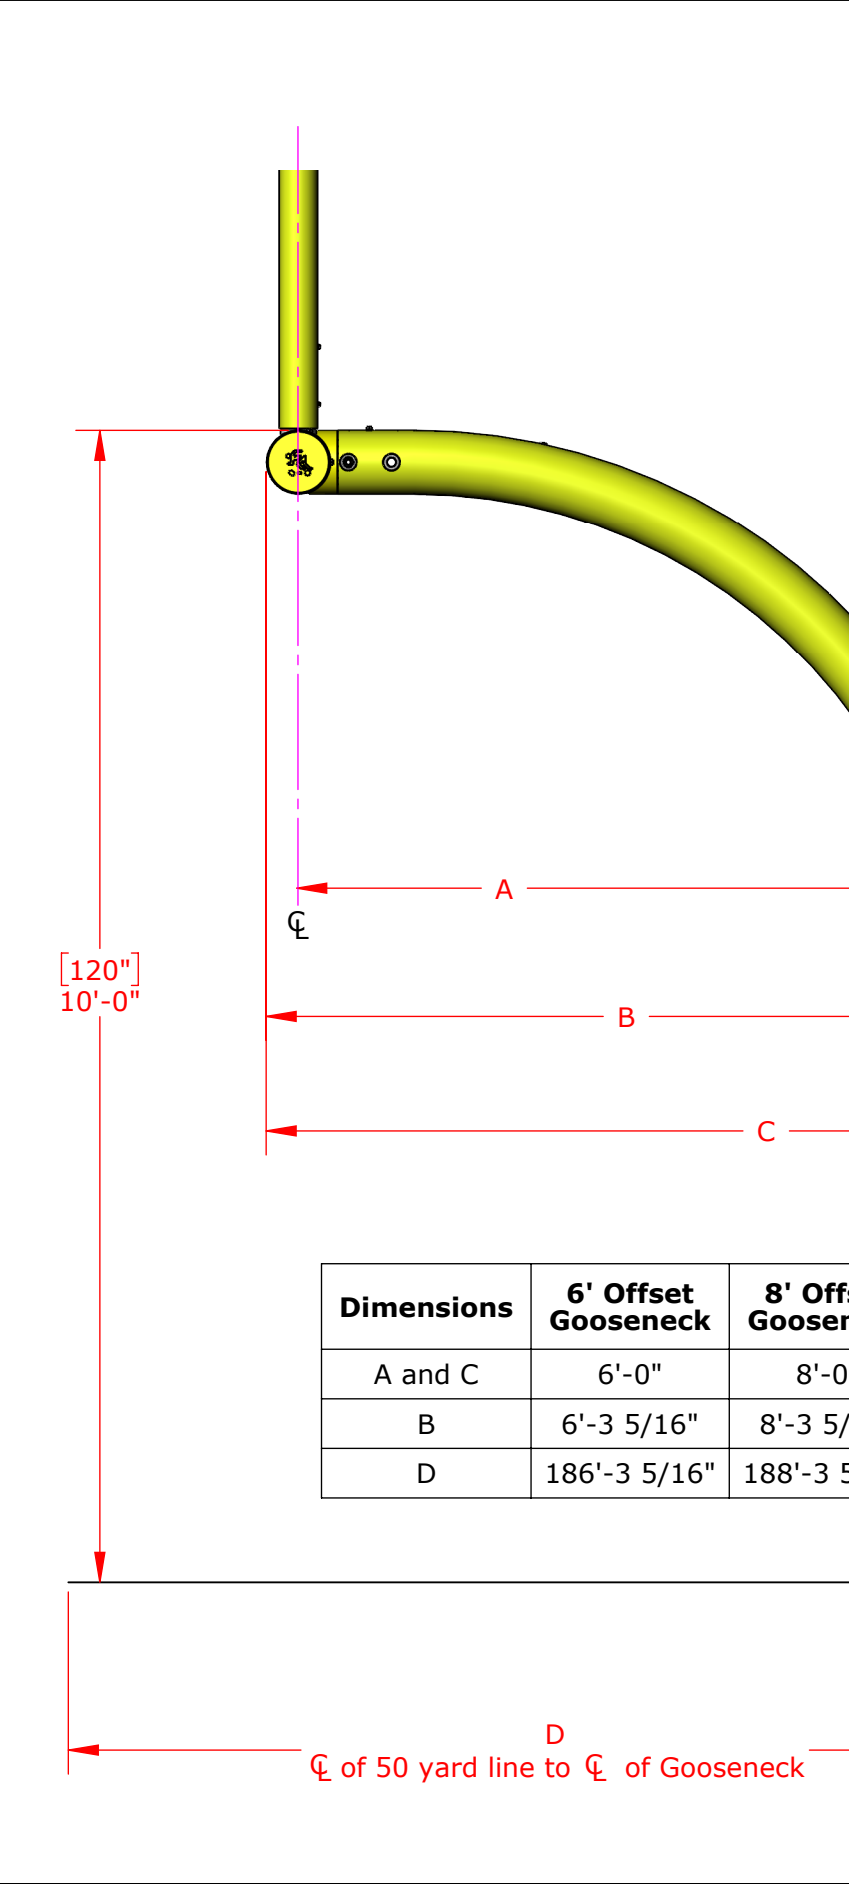


Dimensions	6' Offset Gooseneck	8' Offset Gooseneck
A and C	6'-0"	8'-0"
B	6'-3 5/16"	8'-3 5/16"
D	186'-3 5/16"	188'-3 5/16"


Finish Grade

Access Frame
(See Table)

TITLE:	Football Goal Post Field Placement		DWG NO:	ID-00001
				SHEET 1 OF 1

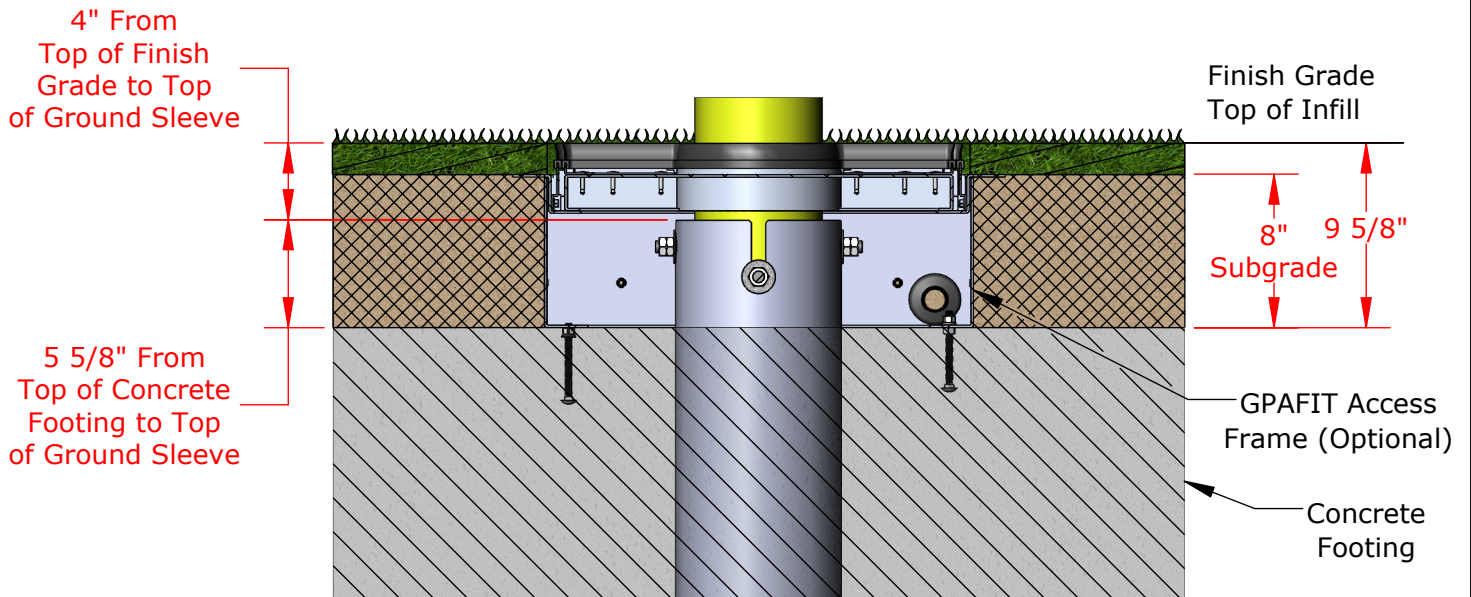

Synthetic Infill Turf Application

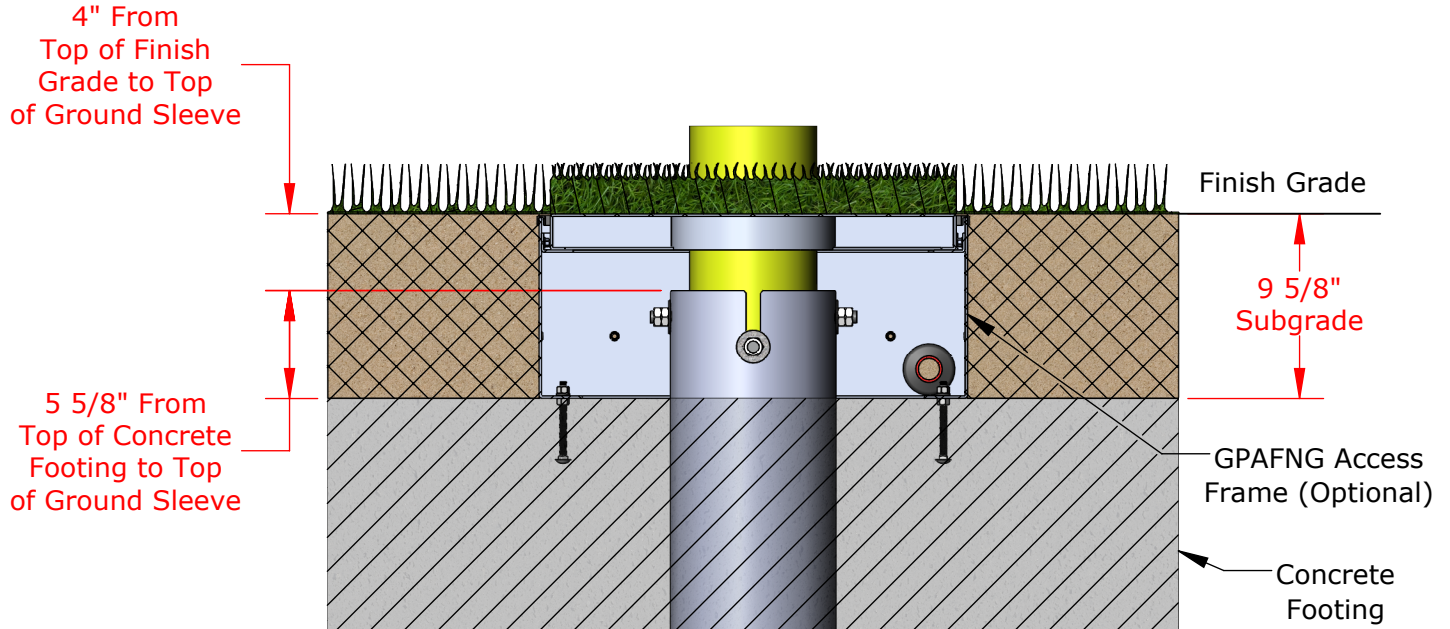

Natural Grass Application

TITLE: **Football Goal Post Elevation
Ground Sleeve**


DWG NO:

ID-00002

SHEET 1 OF 1

Access Frame Installation

Patented Infill Retainer System

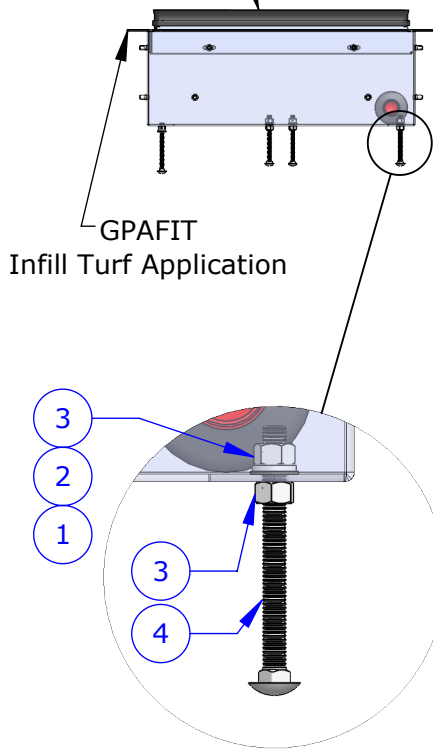

Step 1


Pre-install the four (4) carriage bolts (Item #4) into the bottom flange of the access frame box with the heads down for anchoring into concrete.

Step 2

The box should be installed parallel to the end line. the drain fitting (Item #5) should face toward the nearest drainage system. If applicable, attach a 1" drain line to the end and connect it to the subsurface drainage system (designed and installed by others).

Step 3

Center the access frame around the ground sleeve or base plate and install by pushing the anchor bolts down into the wet concrete. The bottom face of the flange should be flush with the concrete surface. (See associated football elevation detail drawing.)

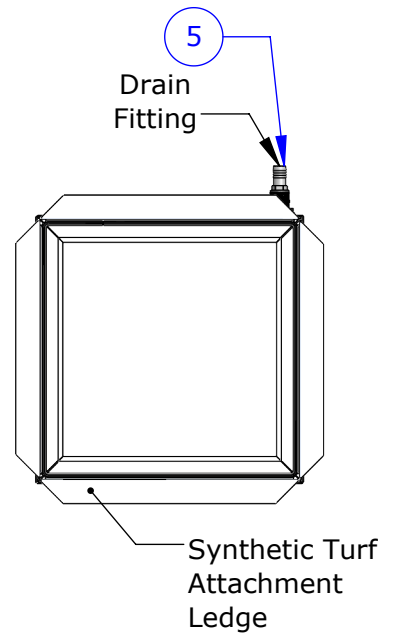

Step 4


The synthetic infill turf can be cut and secured to the provided infill turf attachment ledge. Synthetic turf and attachment method provided by others.

Step 5

Allow concrete to cure before installing football goal post.

ITEM NO.	QTY.	SAP Part Number	DESCRIPTION
1	4	110-FLW-0005	3/8 S.S. FLAT WASHER
2	4	110-SLW-0006	3/8-16 S. S. Lock Washer
3	8	107-HXN-0020	3/8-16 STAINLESS STEEL HEX NUT
4	4	101-CAB-0004	3/8-16 x 4.00" L, Carriage Bolt, SS
5	1	PURCHP-0158	Adapter, Male

Preparing the Covers

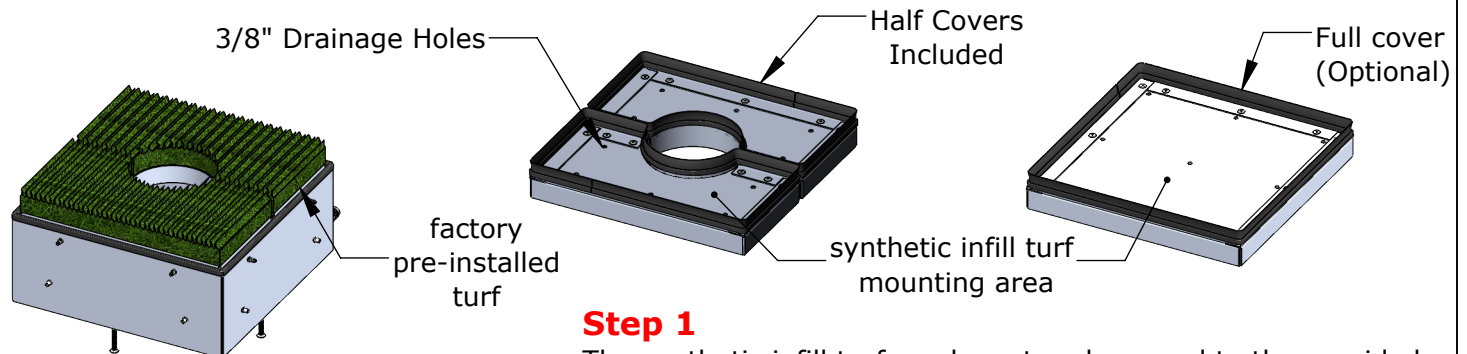

Step 1

The synthetic infill turf can be cut and secured to the provided covers. Synthetic turf and attachment method provided by others.

TITLE: **Football Goal Post
GPAFIT/GPAFNG Access Frame**

DWG NO:

ID-00012

SHEET 1 OF 1

Step 1

Locate ground sleeve on field using drawing #ID-00001.

Step 2


Excavate to the minimum foundation requirements and set concrete forms. See product cut sheet or project design plans.

Step 3

Center the ground sleeve in the form and secure it in a plumb position. See slot detail for ground sleeve orientation in relation to the field lines. See Drawing #ID-00002 for goal post elevation details.

Important Note:

Upper Slots run parallel to End Goal Line while lower slots run perpendicular to end goal line

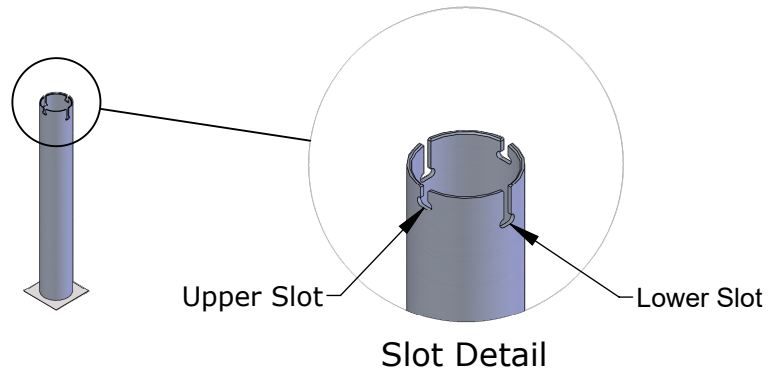

Step 4



See Drawing #ID-00012 if installing optional access frame, otherwise proceed to step 5.

Step 5

Install lower centering hardware.

Step 6

Install Upper Adjustment Hardware.

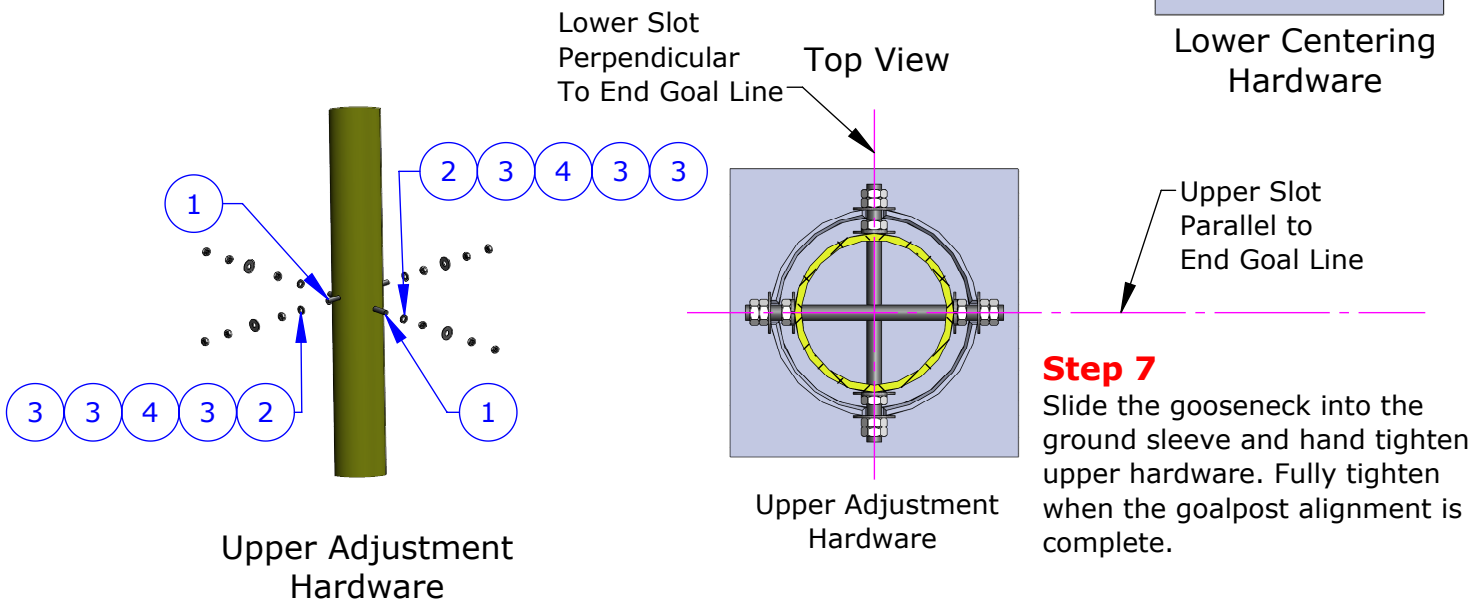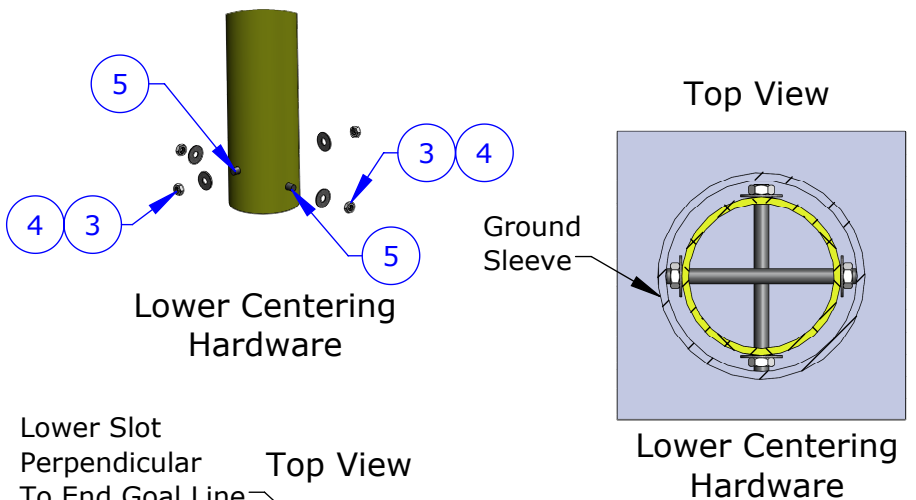

Step 7

Slide the gooseneck into the ground sleeve and hand tighten upper hardware. Fully tighten when the goalpost alignment is complete.

ITEM NO.	QTY.	SAP Part Number	DESCRIPTION
1	2	E-1000-0021	5/8-11 x 10.750" Zinc Plated Steel Threaded Rod
2	4	111-SLW-0005	5/8 Galvanized Lock Washer
3	16	108-HXN-0006	5/8-11 GALV JAM NUT
4	8	111-FLW-0005	5/8" Galvanized Steel Flat Washer
5	2	E-1000-0020	5/8-11 x 7.875" Zinc Plated Steel Threaded Rod

TITLE:

Ground Sleeve Style
Gooseneck Installation

DWG NO:


ID-00009

SHEET 1 OF 1

Football Goal Post AdjustRight® Upright Installation Only

Step 1

Install the directional flags onto the top of the upright using supplied spring hooks.

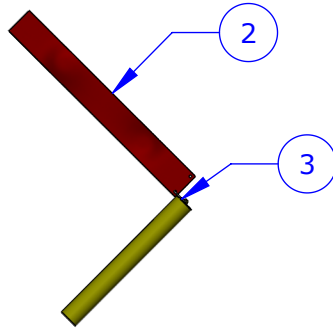

SECTION VIEW A-A

Step 2

Insert the crossbar into the gooseneck and rotate the crossbar as shown to facilitate upright installation.

Important Note:


Do not install any crossbar to gooseneck hardware at this time, crossbar will need to be manually held in place during the entire upright installation. Do not allow crossbar to over-rotate, as this could cause the uprights to hit the ground.

Step 3

Install the uprights onto the stub using the 1/4" serrated flange hex bolts (Item #1). Tighten the hardware connecting the upright to the stub.

Step 4

Per Detail View A, Install the Adjustright® hardware (Item #4) and hand tighten only at this time.

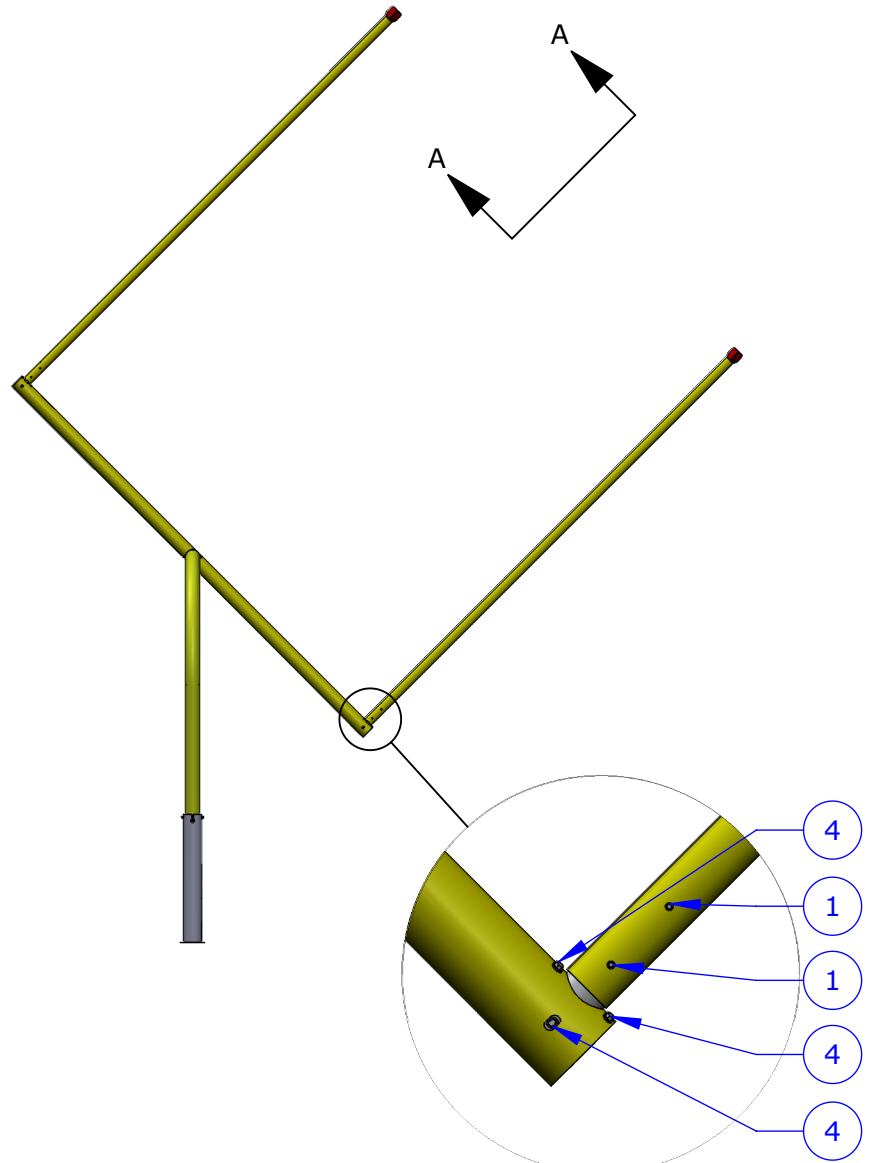

Detail View A

Step 5

After installing the first upright, rotate the crossbar bar to the opposite side to facilitate installation of the remaining upright. After both uprights are installed, rotate the crossbar assembly to its final level position.

ITEM NO.	QTY.	ERPPartNumber	DESCRIPTION
1	4	100-HWH-0001	1/4-20 x 1" Hex Washer Head with serrated flange, Grade 5, Fully Threaded
2	2	GPDSTRGPT	Directional Flag
3	2	PURCHP-0097	3/16" Spring Hook-No Eye 304 SS
4	6	100-HWH-0002	3/8-16 x 1" Hex Washer Head with serrated flange, Grade 5, Fully Threaded

TITLE: **Football Goal Post AdjustRight® Upright Installation**


DWG NO: **ID-00011**

SHEET 1 OF 2

Football Goal Post Welded Fixed Upright Installation Only

Step 1

Install the directional flags onto the top of the upright using supplied spring hooks.

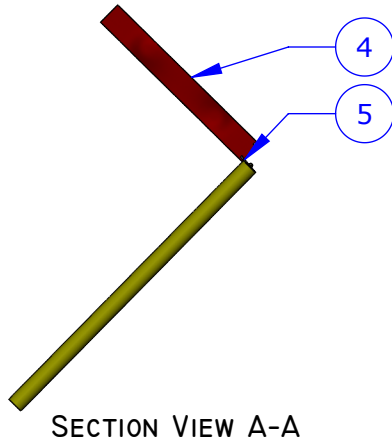

Step 2

Insert the crossbar into the gooseneck and rotate the crossbar as shown to facilitate upright installation.

Important Note:

Do not install any crossbar to gooseneck hardware at this time, crossbar will need to be manually held in place during the entire upright installation. Do not allow crossbar to over-rotate, as this could cause the uprights to hit the ground.

Step 3


Install the uprights onto the stub using the 1/4" serrated flange hex bolts (Item #1). Tighten the hardware connecting the upright to the stub.

Step 4

Per Detail View A, Install the hardware (Item #4) and hand tighten only at this time.

Step 5

After installing the first upright, rotate the crossbar to the opposite side to facilitate installation of the remaining upright. After both uprights are installed, rotate the crossbar assembly to its final level position.

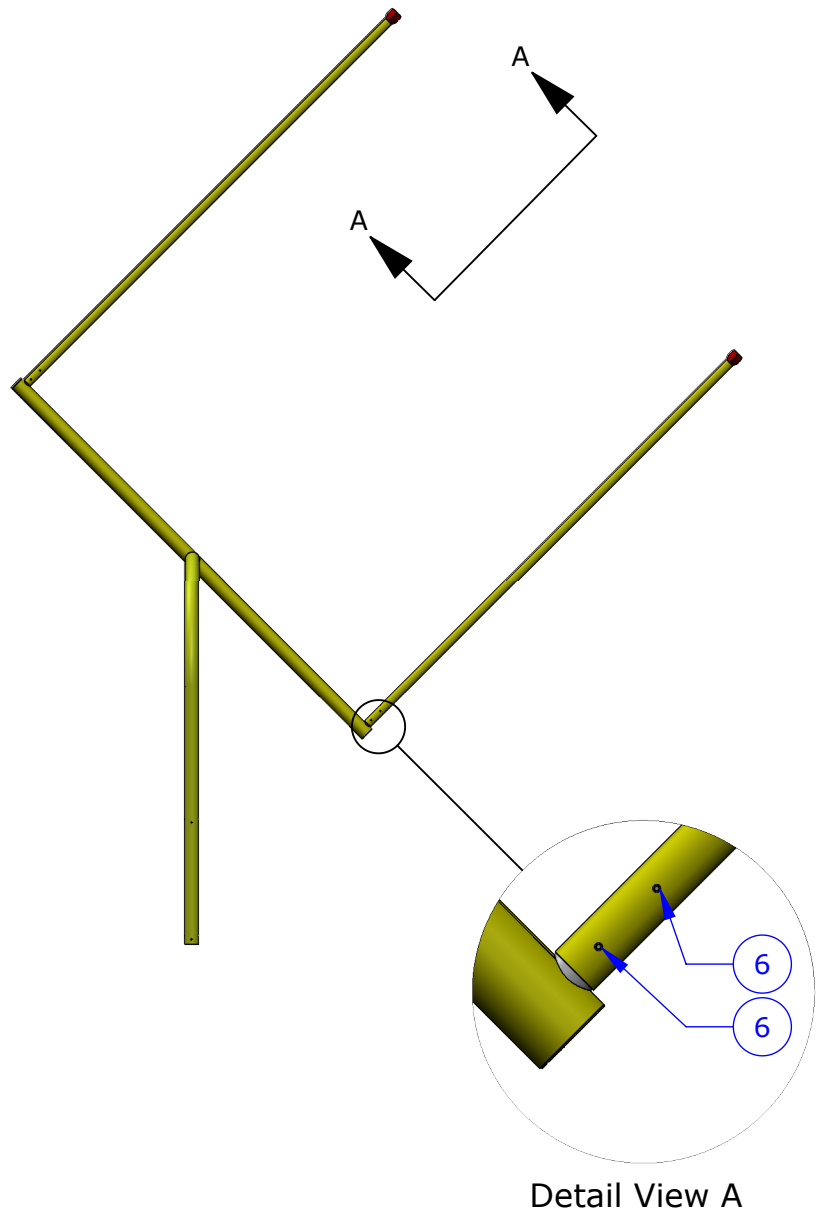


ITEM NO.	QTY.	ERPPartNumber	DESCRIPTION
4	2	GPDSTRGPT	Directional Flag
5	2	PURCHP-0097	3/16" Spring Hook-No Eye 304 SS
6	4	100-HWH-0001	1/4-20 x 1" Hex Washer Head with serrated flange, Grade 5, Fully Threaded

TITLE: **Football Goal Post Welded Fixed Upright Installation**

DWG NO: **ID-00011**

SHEET 2 OF 2

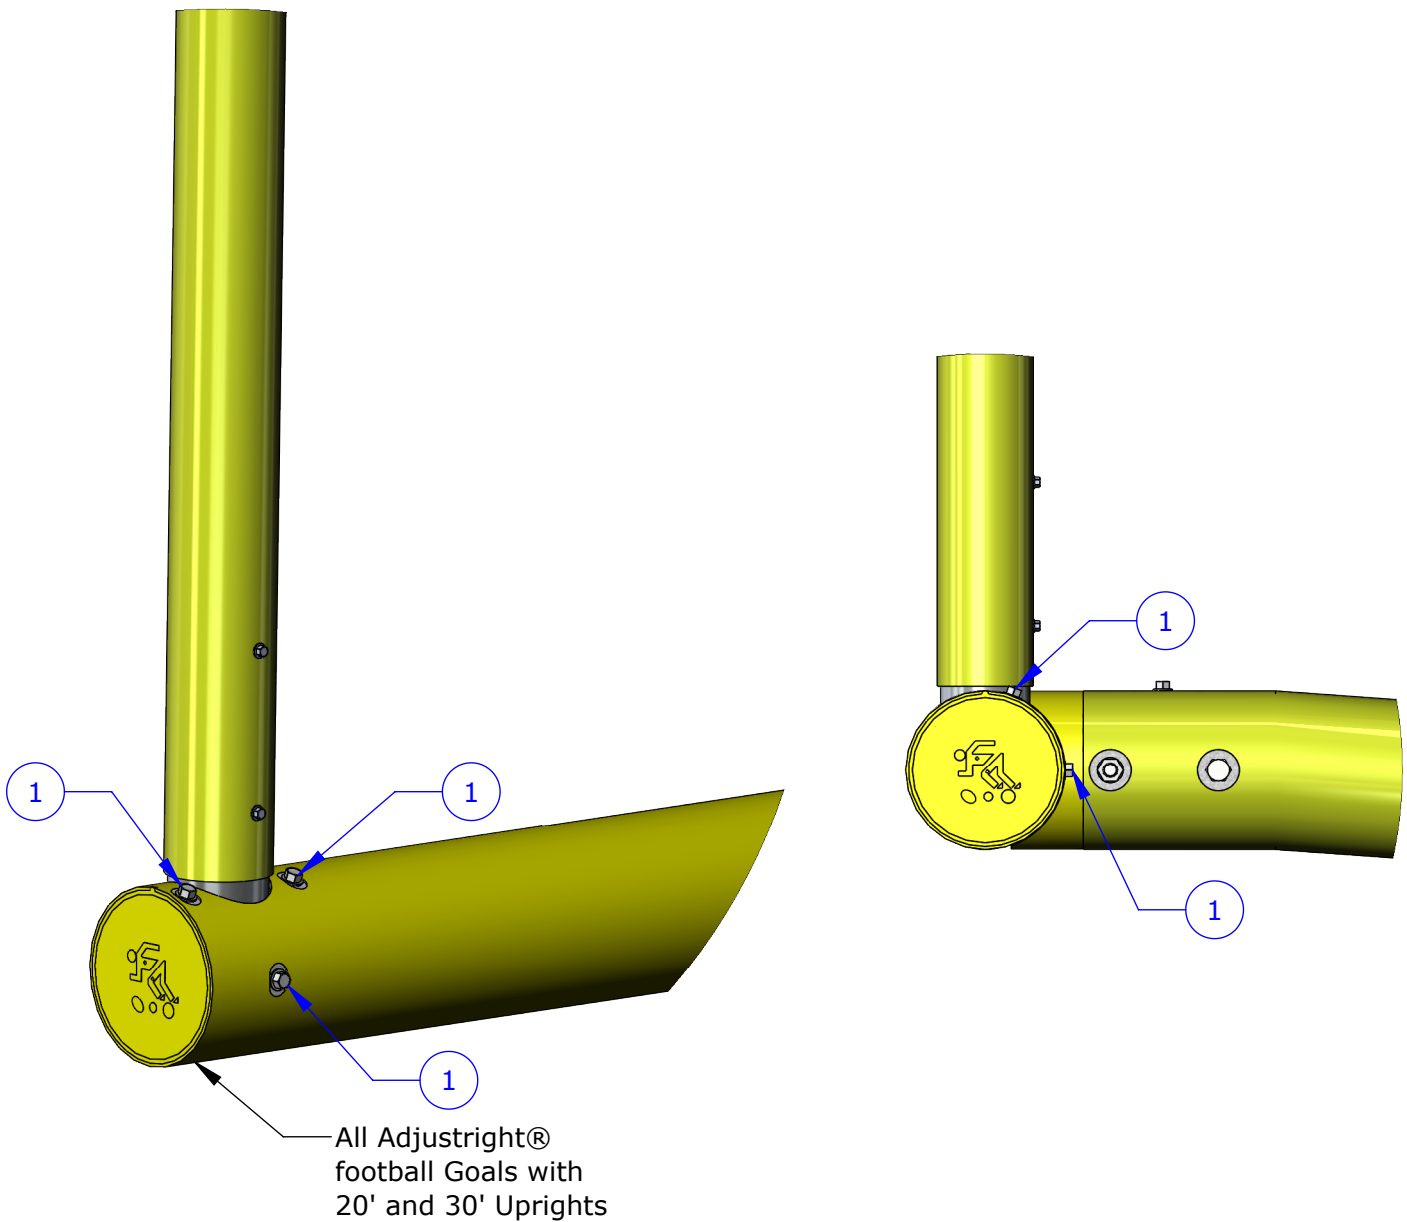

Step 1

Position the level vertically on the upright. Move the upright back and forth utilizing the AdjustRight® stub adjustment feature until upright is plumb and tighten the 3/8" serrated flange bolts (Item # 1) by hand, making sure to maintain upright position.

Step 2

Double check the upright for plumb and tighten the 3/8" serrated flange hex bolts (Item # 1) with a hand torque wrench set to 55 ft-lbs.

Important Note:

Do not exceed 55 ft-lbs, Failure to complete this step will allow uprights to fall out of alignment.

ITEM NO.	QTY.	SAP Part Number	DESCRIPTION
1	6	100-HWH-0002	3/8-16 x 1" Hex Washer Head with serrated flange, Grade 5, Fully Threaded

TITLE: **Football Goal Post
AdjustRight® Upright Adjustment**

DWG NO: **ID-00023**

SHEET 1 OF 1

Step 1

Insert all hardware as shown below.
Do not tighten. (See note #1)

Step 2


Verify that the crossbar is level,
tighten the (2) 3/8" serrated flange
hex bolts (Item #5) with hand tools.

Step 3

Tighten all remaining hardware.

Step 4

Verify that the crossbar is parallel
to the end line. Top of crossbar
must be 10' above finish grade. If
necessary, make adjustments
using leveling and/or centering
hardware at the base of the
gooseneck.

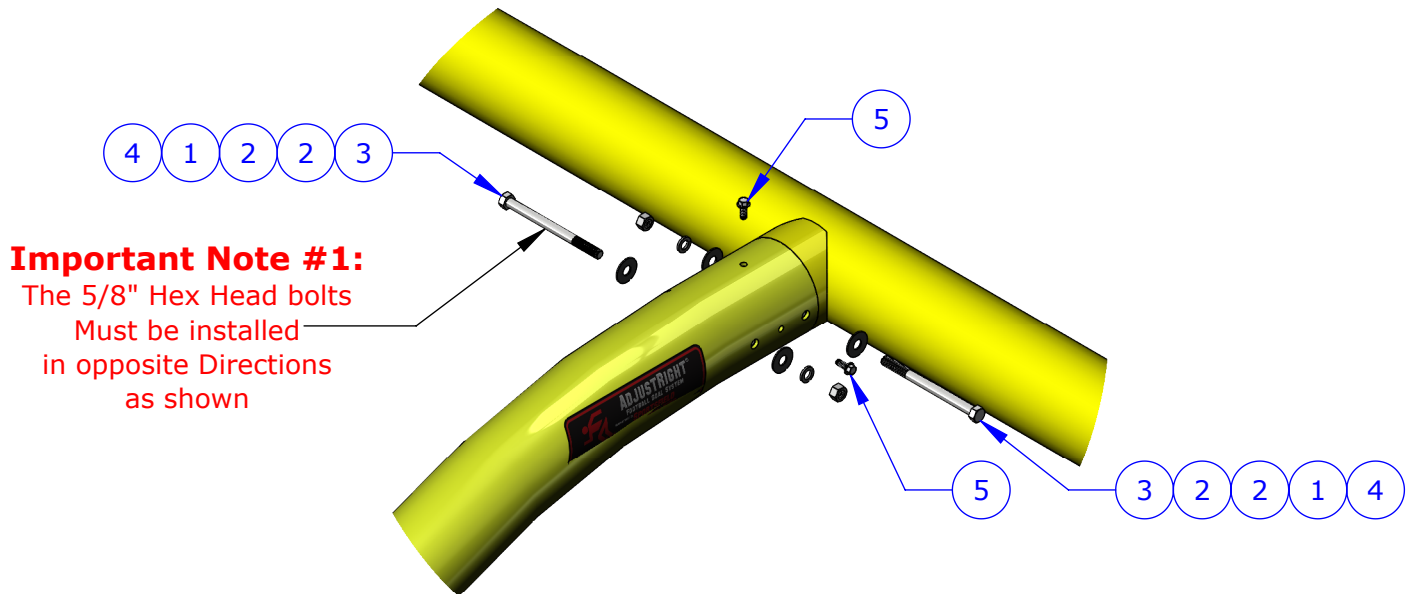

Gooseneck/Crossbar Hardware

ITEM NO.	QTY.	SAP Part Number	DESCRIPTION
1	2	111-SLW-0005	5/8 Galvanized Lock Washer
2	4	111-FLW-0005	5/8" Galvanized Steel Flat Washer
3	2	102-HHC-0014	5/8-11 GALV. Hex Head Bolt X 8.000" Long
4	2	108-HXN-0005	5/8-11 Hex Nut, Galv.
5	2	100-HWH-0002	3/8-16 x 1" Hex Washer Head with serrated flange, Grade 5, Fully Threaded

TITLE: **Football Goal Post
Crossbar to Gooseneck Installation**

DWG NO:

ID-00010

SHEET 1 OF 1