SPORTSFIELD SPECIALTIES
WWW.SPORTSFIELD.COM
Excellence from Design to Installation

1-888-975-3343

Install Instructions

Track Curb Installation

Add Row Delete Row

Product No.	Product Description
TCBM	Aluminum Track Curbing Mill Finish Non-Permanent Installation
TCBP	Aluminum Track Curbing Powder Coated Finish Non-Permanent Installation

Add Row Delete Row

Track Curb Installation..... ID-00421

Step 1
Install the first curb where the curve of the track transitions into the straight-away. See sheet 2.

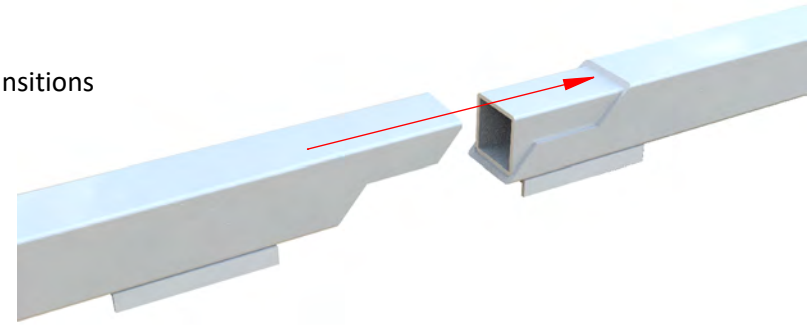

Step 2
Place the straight sections with the sheathed end overlapping the joint sleeve of the previous curb.

Step 3
Lay the curbing over the white painted line.

Step 4
Leave a ¼" gap between each piece to allow thermal expansion.

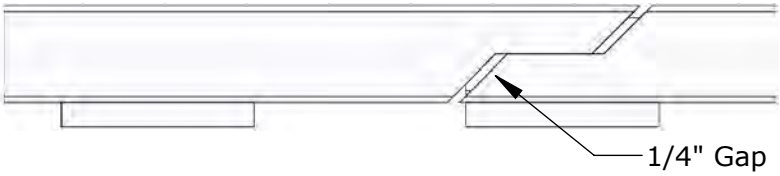

Step 5
The last piece of the straight-away will be too long for the space.

IMPORTANT: Wait until all the full pieces are in place before cutting any short lengths.

Step 6
Following the white line, lay out the full curved pieces around the bend. A short piece will need to be cut to fit the final curved space.

Step 7
Begin the second straight-away as previously done.

Step 8
Lay out the second bend of the track.

Step 9
To cut the short pieces to length, lay down a full piece and mark it where it overlaps the transition point. Make a straight cut to length.

Step 10
Place the joint sleeve and the feet as shown and put them together by using supplied self tapping screws.

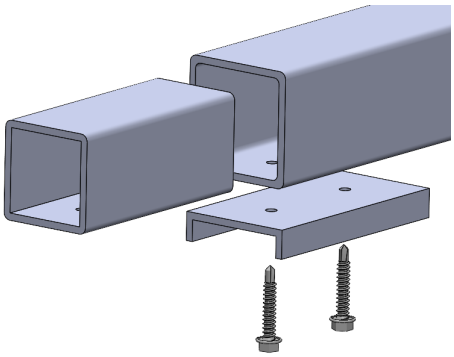

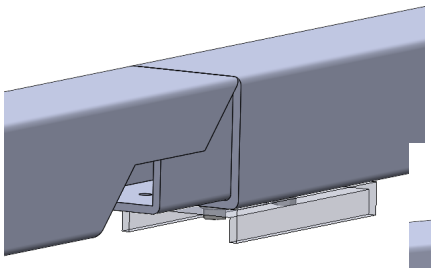

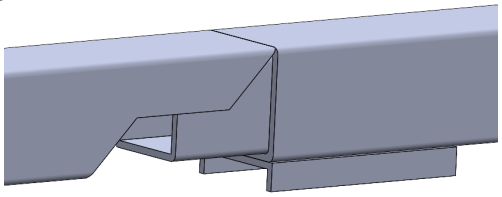

TITLE:	DWG NO:
Track Curb Installation	ID-00421
	SHEET 1 OF 2

TITLE:

Track Curb Installation

DWG NO:

ID-00421

SHEET 2 OF 2